



pacsafe[®]
smart travel gear

ENG

TSA accepted key-card lock


prosafe[™] 750

TSA accepted key-card lock

Instructions

model # 10240

model # 10242

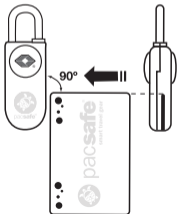

To unlock:

Step ① - Insert either of the punched corners of the card into the lock slot from the top of the slot without any clearance at 90 degree position.

Step ② - Press firmly until lock snaps open.

To lock:

Step ① - Simply press the shackle to close.